

SIEMENS

SIMOREG CM

Operating Instructions

6RA70 Series

Control Module with microprocessor
for Variable-Speed DC Drives



These Operating Instructions are available in the following languages:

Language	German	French	Spanish	Italian
Order No.	6RX1700-0BD00	6RX1700-0BD77	6RX1700-0BD78	6RX1700-0BD72

Control Module software version:

As these Operating Instructions went to print, SIMOREG CM were being delivered from the factory with software version **1.8** installed.

These Operating Instructions also apply to other software versions.

Earlier software versions: Some parameters described in this document might not be stored in the software (i.e. the corresponding functionality is not available on the converter) or some parameters will have a restricted setting range. If this is the case, however, appropriate reference to this status will be made in the Parameter List.

Later software versions: Additional parameters might be available on the SIMOREG CM (i.e. extra functions might be available which are not described in these Operating Instructions) or some parameters might have an extended setting range. In this case, leave the relevant parameters at their factory setting, or do not set any parameter values which are not described in these Instructions !

The latest software version is available at the following Internet site:
<http://www.siemens.at/eww/a&d/updates> (password for access: "simo1reg").

The reproduction, transmission or use of this document or contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

We have checked that the contents of this publication agree with the hardware and software described herein. Nonetheless, differences might exist and therefore we cannot guarantee that they are completely identical. The information given in this publication is reviewed at regular intervals and any corrections that might be necessary are made in the subsequent printings. Suggestions for improvement are welcome at all times.

SIMOREG ® is a registered trademark of Siemens

0 Contents

	Page
1 Safety information	
2 Ordering Information	
2.1 Converter order number	2-1
2.2 Ordering information for options with order codes	2-1
2.3 Ordering information for cable sets	2-3
3 Description	
3.1 Applications	3-1
3.2 Design	3-1
3.3 Mode of operation	3-2
3.4 Technical data	3-2
3.5 Applicable standards	3-3
3.6 Abbreviations	3-3
4 Shipment, unpacking	
5 Installation	
5.1 Dimensions drawings	5-2
5.1.1 Converter components assembled (state as delivered)	5-2
5.1.2 Converter components arranged side by side	5-3
5.2 Mounting/removal and division of modules	5-4
5.2.1 Removal of module C98043-A7043	5-4
5.2.2 Dividing module C98043-A7043	5-5
5.2.3 Dividing module C98043-A7044	5-6
5.2.4 Mounting module C98043-A7043	5-7
5.2.5 External assembly of module parts	5-8
5.2.5.1 Terminal strip	5-8
5.2.5.2 Firing transfer plates	5-8
5.2.5.3 Fuse monitoring	5-8
5.2.5.4 Voltage acquisition	5-8
5.3 Mounting options	5-9
5.3.1 Terminal expansion module CUD2	5-9
5.3.2 Optional supplementary boards	5-10
5.3.2.1 Local bus adapter (LBA) for mounting optional supplementary boards	5-10
5.3.2.2 Mounting of optional supplementary boards	5-11

6 Connections

6.1	Installation instructions for proper EMC installation of drives	6-2
6.1.1	Fundamental principles of EMC	6-2
6.1.1.1	What is EMC	6-2
6.1.1.2	Noise radiation and noise immunity	6-2
6.1.1.3	Limit values	6-2
6.1.1.4	SIMOREG converters in industrial applications	6-3
6.1.1.5	Non-grounded supply systems	6-3
6.1.1.6	EMC planning	6-3
6.1.2	Proper EMC installation of drives (installation instructions)	6-4
6.1.2.1	General	6-4
6.1.2.2	Rules for proper EMC installation	6-4
6.1.2.3	Arrangement of components for converters	6-10
6.1.3	Information on line-side harmonics generated by converters in a fully-controlled three-phase bridge circuit configuration	6-11
6.2	Block diagrams with recommended connection	6-13
6.3	Connection of the external power section	6-15
6.4	Dismantle capability	6-20
6.5	Measuring the armature current	6-28
6.5.1	General information	6-28
6.5.2	Current measurement with two current transformers on the network side	6-29
6.5.3	Current measurement via terminal block X3 with external measuring circuit	6-30
6.5.3.1	External current transformer in V connection with +1V with rated armature direct current	6-30
6.5.3.2	External current transformer in V connection with +10V with rated armature direct current	6-30
6.5.3.3	Differential input for +10V at rated armature direct current	6-31
6.5.4	External current measurement via X21A	6-31
6.5.5	Notes on the difference input, control range limits, and grounding	6-31
6.6	Connecting the firing transformer	6-33
6.6.1	General information	6-33
6.6.1.1	Normal use (individual)	6-33
6.6.1.2	Parallel connection of firing pulses	6-33
6.6.1.3	External amplification of firing pulses	6-33
6.7	Connecting the voltage measurement	6-34
6.8	Connecting the fuse monitors	6-35
6.9	Parallel connection	6-36
6.9.1	Parallel connection of devices	6-36
6.9.1.1	Circuit diagram showing parallel connection of SIMOREG converters	6-36
6.9.1.2	Parameterization of SIMOREG converters for parallel connection	6-37

		Page
6.9.2	Parallel connection of power sections	6-40
6.9.2.1	Current distribution / symmetry	6-40
6.9.2.2	Comment about voltage measurement / synchronization	6-40
6.9.2.3	Comment about fuse monitoring	6-40
6.10	Field supply	6-41
6.10.1	Circuit diagram of the power section	6-41
6.10.2	Voltage measurement of the field power section	6-41
6.10.3	Conversion to field extra-low voltage	6-42
6.11	Fuses and commutating reactors	6-42
6.11.1	Notes on commutating reactors	6-42
6.11.2	Fuses for the field circuit	6-42
6.12	Arrangement of printed circuit boards	6-43
6.13	Arrangement of customer connections (terminals, connectors, Faston tabs)	6-44
6.14	Terminal assignment (terminals, Faston tabs, ribbon cables)	6-49

7 Start-up

7.1	General safety information	7-1
7.2	Operator control panels	7-3
7.2.1	Simple operator control panel (PMU)	7-3
7.2.2	User-friendly operator control panel (OP1S)	7-4
7.3	Parameterization procedure	7-6
7.3.1	Parameter types	7-6
7.3.2	Parameterization on simple operator control panel	7-6
7.4	Reset to default value and adjust offset	7-8
7.5	Start-up procedure	7-9
7.6	Manual optimization (if necessary)	7-17
7.6.1	Manual setting of armature resistance R_A (P110) and armature inductance L_A (P111)	7-17
7.6.2	Manual setting of field resistance R_F (P112)	7-18
7.7	Starting up optional supplementary boards	7-19
7.7.1	Procedure for starting up technology boards (T100, T300, T400)	7-19
7.7.2	Sequence of operations for starting up PROFIBUS boards (CB1, CBP, CBP2)	7-20
7.7.3	Sequence of operations for starting up CAN bus boards (CB2, CBC)	7-27
7.7.4	Procedure for starting up SIMOLINK boards (SLB)	7-33
7.7.5	Procedure for starting up expansion boards (EB1 and EB2)	7-36
7.7.6	Procedure for starting up the pulse encoder board (SBP)	7-37

8 Function diagrams

9	Function descriptions	
9.1	General explanations of terms and functionality	9-1
9.2	Computation cycles, time dela	9-5
9.3	Switch-on, shutdown, enabling	9-6
9.3.1	OFF2 (voltage disconnection) - control word 1, bit 1	9-6
9.3.2	OFF3 (Fast stop) - control word 1, bit 2	9-6
9.3.3	Switch-on / shutdown (ON / OFF) terminal 37 - control word 1, bit 0	9-7
9.3.4	Operating enable (enable) terminal 38 - control word 1, bit 3	9-10
9.4	Ramp-function generator	9-10
9.4.1	Definitions	9-11
9.4.2	Operating principle of ramp-function generator	9-11
9.4.3	Control signals for ramp-function generator	9-12
9.4.4	Ramp-function generator settings 1, 2 and 3	9-12
9.4.5	Ramp-up integrator	9-13
9.4.6	Ramp-function generator tracking	9-13
9.4.7	Limitation after ramp-function generator	9-14
9.4.8	Velocity signal dv/dt (K0191)	9-14
9.5	Inching	9-14
9.6	Crawling	9-15
9.7	Fixed setpoint	9-15
9.8	Safety shutdown (E-Stop)	9-16
9.9	Activation command for holding or operating brake (low active)	9-17
9.10	Switch on auxiliaries	9-20
9.11	Switch over parameter sets	9-20
9.12	Speed controller	9-21
9.13	Serial interfaces	9-22
9.13.1	Serial interfaces with USS® protocol	9-23
9.13.2	Serial interfaces with peer-to-peer protocol	9-25
9.14	Thermal overload protection of DC motor (I ² t monitoring of motor)	9-29
9.15	Speed-dependent current limitation	9-32
9.15.1	Setting the speed-dependent current limitation for motors with commutation transition	9-33
9.15.2	Setting of speed-dependent current limitation for motors without commutation transition	9-34
9.16	Automatic restart	9-35
9.17	Field reversal	9-35
9.17.1	Direction of rotation reversal using field reversal	9-36
9.17.2	Braking with field reversal	9-37
9.18	Status description of some bits of status word ZSW1	9-39

10 Faults / Alarms

10.1	Fault messages	10-1
10.1.1	General information about faults	10-1
10.1.2	List of fault messages	10-2
10.1.2.1	Supply faults	10-2
10.1.2.2	External fault	10-2
10.1.2.3	Supply faults	10-3
10.1.2.4	Interface error	10-5
10.1.2.5	External faults	10-7
10.1.2.6	Fault messages from motor sensors	10-8
10.1.2.7	Drive faults	10-9
10.1.2.8	External faults	10-9
10.1.2.9	Drive faults	10-9
10.1.2.10	Start-up faults	10-12
10.1.2.11	External faults	10-17
10.1.2.12	Start-up faults	10-17
10.1.2.13	Hardware faults	10-18
10.1.2.14	Internal faults	10-19
10.1.2.15	Communication errors with supplementary boards	10-22
10.1.2.16	Faults messages from supplementary boards	10-23
10.2	Alarm messages	10-24

11 Parameter list**12 List of connectors and binectors**

12.1	Connector list	12-1
12.2	Binector list	12-22

13 Maintenance

13.1	Procedure for updating software (upgrading to a new software version)	13-2
13.2	Replacement of components	13-3
13.2.1	Replacement of PCBs	13-3
13.2.2	Replacement of thyristor and diode modules (field)	13-3

14 Servicing / Spare parts

14.1	Servicing	14-1
14.1.1	Europe	14-1
14.2	Spare parts	14-2

	Page
15	SIMOVIS
15.1	Scope of supply 15-1
15.2	Installation of software 15-1
15.3	Connection of SIMOREG CM to PC 15-1
15.4	Further information 15-2
16	Environmental compatibility
17	Applications
18	Appendix
18.1	Additional documentation 18-1
	Sheet for customer feedback 18-3